


SPARE PARTS LIST
LTW PIPE GRAB TYPE GZ 5,0 t

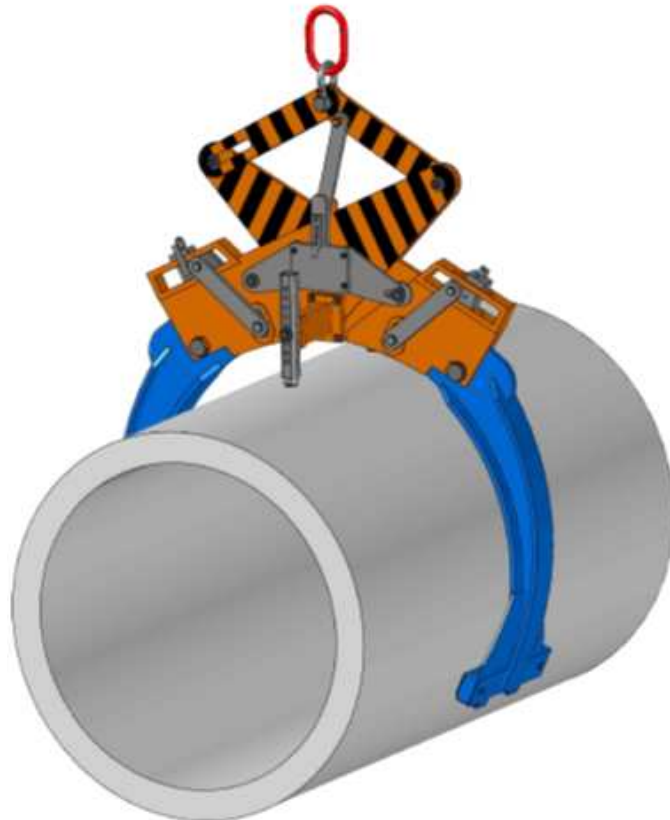


manufacturer: **LTW Tiefbauvertriebs GmbH**
Holter Weg 11
D – 41836 Hückelhoven-Brachelen

phone: +49 (0) 24 62 / 2009 0
fax: +49 (0) 24 62 / 2009 15
e-mail: info@ltw-verbau.de
homepage: <http://www.ltw-shoring.com>

SPARE PARTS LIST

LTW PIPE GRAB TYPE GZ 5,0 t

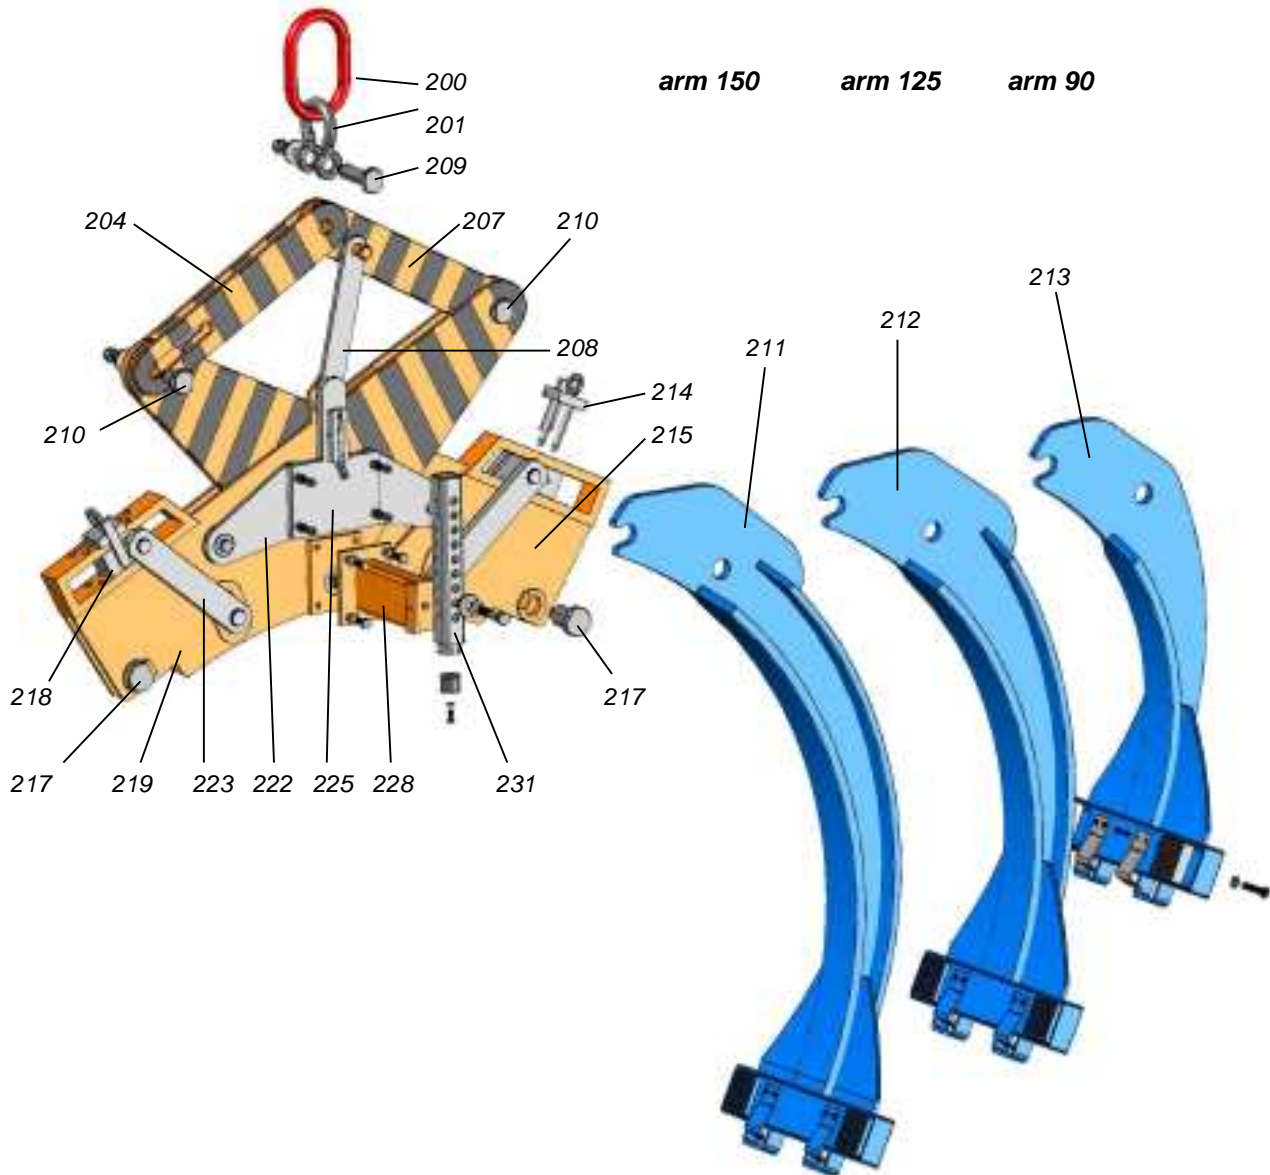

pos.	description	code	qty.	pos.	description	code	qty.	pos.	description	code	qty.
		50 201				50 201				50 201	
200	master link	0049	1	211	arm 150	50 200 0007	2	219	base plate, double panel		1
201	shackle	0031	1	212	arm 125	50 200 0006	2	222	automat holder (2 parts)	0045 0046	1
204	flap with slot		2	213	arm 90	50 200 0005	2	223	connecting device		1
207	guide bracket		1	214	safety device	0033	2	225	switch plate	0023	1
208	switch rod	0025	1	215	base plate t=20		1	228	support holder	0041	2
209	shackle bolt M16 30*93	0020	1	217	bolt M20 40*60		2	231	support. cpl.	0006	2
210	bolt M16 30*43	0030	2	218	guide piece		2	240	center bolt M20 40*62		1

SPARE PARTS LIST

LTW PIPE GRAB TYPE GZ 5,0 t



spare parts - subassembly

pos.	description	code	qty.
		50 201	
231	support cpl. with:	0006	1
234	rubber buffer	50 033 0005	1
235	hexagon screw M8*20		1
228	support holder with:	0041	1
227	hexagon screw M12*25	0009	4
	spring washer A12		4
211	arm 150 cpl. with:	50 200 0007	1
237	Leaf spring cpl.	0022	2
238	Steel jaw cpl.	0021	2
212	Arm 125 cpl. with:	50 200 0006	1
237	leaf spring cpl.	0022	2
238	steel jaw cpl.	0021	2
213	arm 90 cpl. with:	50 200 0005	1
237	leaf spring cpl.	0022	2
238	steel jaw cpl.	0021	2
237	leaf spring cpl. with:	0022	1
	hexagon screw M6*10	0039	2
	spring washer A6		2
238	steel jaw cpl. with:	0021	1
	hexagon screw M12*50	0050	1
	spring washer A12		1
225	switch plate cpl. with:	0023	1
	switch plate		1
	distance spring		1
226	cylinder head screw M10*20	0024	4
225.1	safety latch cpl.	0003	1
225.1	safety latch cpl. with:	0003	1
	safety latch		1
	spring for safety latch	0015	1
	spring dowel pin 6*32		1



special accessoires for stoneware pipes

pos.	description	code	qty.
		50 201	
238 G	rubber jaw cpl. with:	0016	4
	hexagon screw M12*40	0051	4
	spring washer A12		4

SPARE PARTS LIST

LTW PIPE GRAB TYPE GZ 5,0 t



spare parts – bolts / screws

pos.	description	for connection between	code
			50 201
209	shackle bolt M16 30*93 with: washer 58*5*18 spring washer A16 nut M16	grab head shackle - flaps	0020 0042 0034
210	bolt M16 30*43 with: washer 58*5*18 spring washer A16 nut M16	grab head flaps – base plate	0030 0042 0034
217	bolt M20 40*60 with: washer 68*5*22 spring washer A20 nut M20	grab head / -arm base plate – Arm	0036 0035
240	center bolt M20 40*62 with: washer 55*5*22 spring washer A20 nut M20	grab head base plate – base plate	50 021 0007
224	hexagon screw M16*90 with splint washer 58*5*18 washer 68*5*22 spring washer A16 crown nut M16	grab head automat holder – base plate	0048 0042 0036
226	cylinder head screw M10*25 with: toothed washer A10	grab head automat holder – switch plate	0024
230	hexagon screw M16*90 with: washer 58*5*18 spring washer A16	grab head support – support holder	0043 0042

